

## P.I.C.S MOBILES ADAPTER LIST

| PART NUMBER | DESCRIPTION    | MODEL     | NOTES                                   | SUITABLE FOR:  |    |
|-------------|----------------|-----------|---|--|----|
| 602273M000  | MOBILE ADAPTER | ALCATEL   |   | - Alcatel ONE TOUCH DB serie   |    |
| 602012M001  | MOBILE ADAPTER | BOSCH     | Inserire da spento                      | - Bosch M-COM 506  | AA |
| 602012M002  | MOBILE ADAPTER | BOSCH     |   | - Bosch M-COM 607-608  |    |
| 602012M003  | MOBILE ADAPTER | BOSCH     |   | - Bosch M-COM 718-738  | BB |
| 602014M001  | MOBILE ADAPTER | ERICSSON  |   | - Ericsson 237-238-318-337-338-388   |    |
| 602014M002  | MOBILE ADAPTER | ERICSSON  |   | - Ericsson 628-688   | CC |
| 602014M003  | MOBILE ADAPTER | ERICSSON  |   | - Ericsson 768-738-788-788e-868-888  | CC |
| 602267M000  | MOBILE ADAPTER | ERICSSON  |   | - Ericsson T28s-R320 T29 T39 T65 T68   |    |
| 602014M004  | MOBILE ADAPTER | ERICSSON  |   | - Ericsson T18s T10  |    |
| 602090M001  | MOBILE ADAPTER | MOTOROLA  | Inserire da spento                      | - Motorola 8700-8900   | AA |
| 602090M002  | MOBILE ADAPTER | MOTOROLA  | Inserire da spento                      | - Motorola Startac TM130   | DD |
| 602090M003  | MOBILE ADAPTER | MOTOROLA  | Usare solo a tel accesso                | - Motorola CD920-CD930   | DD |
| 602272M000  | MOBILE ADAPTER | MOTOROLA  | T720 tono pics/happy<br>dopo La suonera | - Motorola V3688-L7089 P7389-V3690-<br>V50-V51-T191-T192-V60-V66-V70-T720 time port serie. |    |
| 602268M000  | MOBILE ADAPTER | NEC       |   | - Nec DB2000   |    |
| 602011M001  | MOBILE ADAPTER | NOKIA     |   | - Nokia 1610-1611-1630-1650  | EE |
| 602011M002  | MOBILE ADAPTER | NOKIA     |   | - Nokia 3110   | EE |
| 602011M003  | MOBILE ADAPTER | NOKIA     |   | - Nokia 8110-8110i   | EE |
| 602011M004  | MOBILE ADAPTER | NOKIA     |   | - Nokia 2010-2110-2110i  |    |
| 602011M005  | MOBILE ADAPTER | NOKIA     |   | - Nokia 5110-5130  | FF |
| 602011M006  | MOBILE ADAPTER | NOKIA     |   | - Nokia 6110-6150-7110-6210  | FF |
| 602270M000  | MOBILE ADAPTER | NOKIA     |   | - Nokia 3210-8210-8850-3310-3330-3410-<br>3510-6510-8310-8910                              |    |
| 602678M002  | MOBILE ADAPTOR | NOKIA     |   | - Nokia 6310   |    |
| 602015M001  | MOBILE ADAPTER | PANASONIC |   | - Panasonic G450-G500  |    |
| 602015M002  | MOBILE ADAPTER | PANASONIC |   | - Panasonic G600   |    |
| 602269M000  | MOBILE ADAPTER | PANASONIC |   | - Panasonic GD30/50/70/90  |    |
| 602013M001  | MOBILE ADAPTER | PHILIPS   |   | - Philips Genie-Genie Sport-DB-2000  |    |
| 602017M001  | MOBILE ADAPTER | SAGEM     |   | - Sagem RC715-725-730-810-820<br>RD750R / MC810-820-850                                    |    |
| 602271M001  | MOBILE ADAPTER | SAMSUNG   | Riposta conTasto                        | - Samsung SGH600   |    |
| 602272M001  | MOBILE ADAPTER | SAMSUNG   |   | - Samsung SGH2200-2400   |    |
| 602010M002  | MOBILE ADAPTER | SIEMENS   |   | - Siemens S15  | BB |
| 602010M001  | MOBILE ADAPTER | SIEMENS   |   | - Siemens S6   |    |
| 602010M003  | MOBILE ADAPTER | SIEMENS   |   | - Siemens C25/S25/SL45/ME45  |    |
|             | MOBILE ADAPTER | SIEMENS   |   | - Siemens C35/S35/M35/A35  |    |
| 602678M001  | MOBILE ADAPTOR | SIEMENS   | Riposta conTasto apri                   | - Siemens M30-C30  |    |
| 602678M000  | MOBILE ADAPTOR | SONY      | Risp autom. Autom predef                | - Sony CMD Z5-CD5  |    |

Note: MODEL WITH THE SAME LETTER IN THE LAST COLUMN ARE INTERCHANGEABLE (e.g. AA,EE etc)